


# E-Z INSTRUCTIONS:


① Remove the plastic wrap & place the product face down on a flat surface.



② UNFOLD Side & Rear Panels so they are flat.

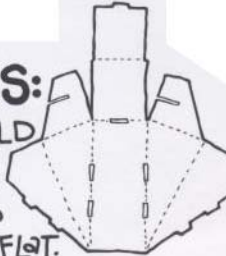


③ FOLD Side Panel up to BRING WINGS TOGETHER. INTER-LOCK WINGS INTO SLOTS.

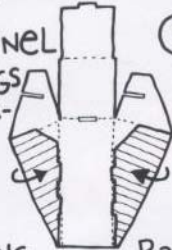

④ Tuck Side Panels INTO slots to lock the panels INTO place.



⑤ BRING Back Panel FORWARD to WRAP over the interlocked WINGS. LOCK BACK PANEL INTO PLACE USING TABS.

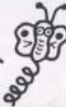

⑥ FINALLY, INSERT the END of the SPRING (SPRINGY TOY) INTO the HOLE PROVIDED.



**TADA!**  
IF YOUR RAMP LOOKS LIKE THIS,

